

**ATTENTION: the operations for replacing the cassette must be carried out by an authorized person.**



1. **Remove the plug from the socket.**
2. Disconnect the water supply.
3. Wait 5 minutes for the heating to cool down
4. Make sure that the drain hose is free and can move with the movement that is necessary to gain access to the top.
5. Make sure that the water supply hose has sufficient room to move with it, or disconnect from the tap.
6. Undo the screws on the side of the brackets so that the unit can be turned in the bracket. Use a crosshead 2 or 3 screwdriver.
7. Loosen the EPP screw on the side of the Humidifier 2.5 cm.
8. Turn the unit 90° so that the cassette is accessible. Take into account any leakage water from the side of the unit!
9. Disconnect the cassette from the water supply by pushing in the ring of the knee joint (on side of the housing) and sliding the whole knee off of the black hose. In this way the cassette is disconnected and can be removed.




Press the knee ring



Disconnecting the hose

10. Pull/slide the cassette out of the unit.  
For this use the tool supplied with it.  
Screw the plug into the cassette and pull the cassette out.

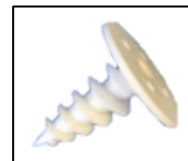

11. Clean the inside of unit with a soft cloth if necessary.  
**Do NOT use a cleaning product!**
12. Remove the new cassette from the packaging.
13. Push/slide this into the unit.
14. Push the black hose of the new cassette into the knee joint.
15. Turn the unit again such that **it hangs level**.
16. Tighten the brackets.
17. Open the water supply duct
18. Insert the plug into the socket.
19. Your humidifier is again safe, reliable and ready for a new period!



**NB:** The whole used cassette can be disposed of with the residual waste.